

SFP-809 Food Processor
Instruction Leafle
(SFP-809 攪拌機說明書)

File: SFP-809 instruction leaflet.

Date:December 02, 2009.

Rev: 3

IB Remark:

- 1.Size:30x20cm
- 2.Black wording on white paper ,2 size printing , Folded
- 3.Glossy finish paper

說明書的要求：

- 1.尺寸：30（長）X20（寬）CM
- 2.白紙黑字，兩面印刷，對摺
- 3.光粉紙

Revision：

- 1.Added the Safety Clause in the I/B

IMPORTANT SAFEGUARDS

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- Please Retain your purchase docket and gift box which must be presented as proof of Date of Purchase if you wish to claim under the terms of the Guarantee.
- If the product has been 'ABUSED' or 'OPENED AND TAMPERED WITH' in any way, the Terms of the Guarantee are invalidated.

SOUTHERN AFRICA: SOLELY DISTRIBUTED BY:



NU WORLD IND. (PTY) LTD
P.O. BOX 8964, JHB 2000
TEL: (011) 321-2111

12
MONTH
GUARANTEE



Visit our website at:
www.nuworld.co.za



Sunbeam®

DELUXE FOOD PROCESSOR WITH BLENDER



MODEL NO.: SFP 809

Instruction Leaflet

Please read carefully and Save these instructions

R.2

USER INSTRUCTIONS

Please read these instructions carefully and familiarise yourself with your New SUNBEAM DELUXE FOOD PROCESSOR AND BLENDER before first use.

• POWER

• 230V ~ 50Hz 600W

• Ensure that the voltage indicated on the identification plate corresponds with the mains voltage.

• FITTING OF 3 PIN PLUG

WARNING - THIS APPLIANCE MUST BE EARTHED

IMPORTANT: the wires in this mains lead are coloured in accordance with the following code:

Blue	- Neutral
Brown	- Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

The wire which is coloured **blue** must be connected to the terminal which is marked with the letter 'N' or coloured **black**.

The wire which is coloured **brown** must be connected to the terminal which is marked with the letter 'L' or coloured **red**.

PLEASE READ CAREFULLY - ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

- Check that the mains voltage corresponds with the rating of the appliance before operating.
- Never place hands or objects into the Jar while the unit is in operation.
- Take care when handling the cutting blades.
- Never immerse the Motor Base in water.
- To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- Do not leave any appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or infirm persons.
- Unplug from outlet when not in use or before cleaning.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- To disconnect - remove the plug from the outlet. Do not pull plug out by the cord.
- Do not use this product for anything other than its intended use.
- Do not use outdoors, appliance is for household use only.
- No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.
- Do not introduce any foreign objects into the housing or try to open the housing yourself.
- Ensure hands are dry before operating or plugging in.
- Ensure that the unit is set on a flat, even surface.
- Do not operate when the cups are empty and do not remove the Cup Covers before the Blade comes to a complete stop.
- Do not touch the Cutting Blades or insert any kind of object (knives, forks, spoons) into the Cups while in operation. A Spatula may be used only when the product is not in operation.
- The Processor Cup (10) should not be removed while the Blender Cup (4) is being used, and when using the Processor Cup (10), the Blender Cup (4) or Lid (16) must be attached.
- Switch off the appliance before changing accessories.
- **ENSURE THAT ALL LIDS ARE LOCKED INTO PLACE** (This engages the Micro-Switches - without which the unit will not operate)

IMPORTANT SAFEGUARDS

OPERATING INSTRUCTIONS

Before first use :

- All parts of the unit should be thoroughly cleaned before first use (see Section : Cleaning)
- Before inserting the **Blender and Processor Cups** to the housing, ensure that the **Power Cord** is plugged in and the **Speed Knob (5)** is set to '0'.

WHEN USING THE FOOD PROCESSOR:

- When you use the Food Processor, ensure that the **Blender Cup (4)** or **Lid (16)** is attached.
Place the **Lid** on the **Processor Cup (10)** and turn counter-clockwise until you hear it lock into place. (This engages the Micro-Switch)
- **To chop the food into strips :** Place the **Blade Tray (11)** on to the **Rotor (15)**. Place the prepared food in the **Processor Cup (10)** and set to the desired speed. Press the **Processor Push Cover (8)** downward until the food is completely chopped.
- **To chop the food into pieces :** Place the **Blade tray (11)** on to the **Rotor (15)** (Ensure the strip blade faces downwards). Operate the same way as chopping into strips.
- **To chop hard pieces of food :** Place the **Stainless Steel Blade (12)** on to the **Rotor (15)** and operate as above.
- **To mix the food :** Place the **Plastic Plate (7)** on to the **Rotor (15)** and operate as above.

WHEN USING THE BLENDER:

- Remove the **Blender Cup Cover (2)** from the **Blender Cup (4)** by pressing the **Cover Release Button (3)** on the handle and turning the cover counter-clockwise.
- Place the items to be blended into the **Blender Cup (4)** and replace the **Blender Cup Cover (2)** by turning it clockwise until you hear it click. (This engages the Micro-Switch)
- Set the **Speed knob (5)** to the desired position, turning it clockwise.
- After items have been successfully blended, remove the **Blender Cup (4)** by pressing the **Cover Release Button (3)** on the handle down and turning the **Blender Cup Cover (2)** clockwise to unlock and remove.
- Turn the **Blender Cup (4)** clockwise and remove from the **Base (6)**.

NOTES:

- **ENSURE THAT ALL LIDS ARE LOCKED INTO PLACE** - (This engages the Micro-Switches)
- **Only use the appliance for 1 minute at a time, letting it rest for every other minute.**
- Ensure the **Speed Knob (5)** is reset to '0' and the unit is unplugged when not in use.
- This 2 in 1 appliance can also crush ice.

CLEANING THE UNIT:

- After using the unit, **unplug from outlet** and detach assembly. Clean with detergent, **do not use abrasive products.**
- **Do not use in dishwasher, do not submerge Base (Motor Unit).** Clean outside with a soft, dry cloth.

PARTS OF YOUR APPLIANCE

